

## Supplemental Instructions

### Sandwich Doors: Raised Panel or Flush

 <b>CAUTION</b>	<p>Higher wind pressures and larger doors require additional reinforcement.</p> <p>Premature failure of door system may result from improper application.</p> <p>See chart in lower left corner of drawing sheet one for the approved wind pressures and door sizes.</p>
--	--

 <b>WARNING</b>	<p>These supplemental instructions do not contain basic door installation steps and related safety information.</p> <p>Failure to follow basic installation steps and related safety information may result in injury or death.</p> <p>Door installers must follow a primary instruction manual for basic door installation steps and related safety information.</p>
--	---

The correct selection of door and framing materials, in adherence with local building code directives, is the responsibility of the building owner/designer. Use of a reinforced garage door does not constitute automatic compliance with any building code. Local building code officials determine compliance criteria.

A locking system must be installed if the door is not electrically operated.


See drawing for stop molding requirements, on doors not more than 1" wider than opening. When using stop molding, secure molding with minimum 8d nails or 2-1/2" long screws.




*John E. Scates*  
10/14/11  
John E. Scates, P.E.  
3121 Fairgate Drive  
Carrollton, Texas 75007  
TXPE 56308, F-2203

Professional Engineer's seal provided only for verification of windload construction details


**For use with single end hinges**  
**(hinges shown with six screws, see drawing for screw quantity requirements)**

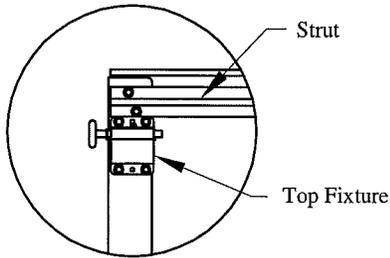


**Strut above top fixture**

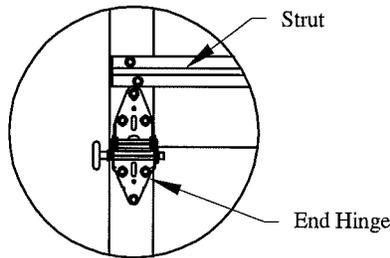


**Strut above hinge**

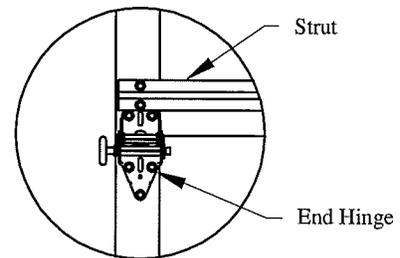


**Strut on top half of hinge**

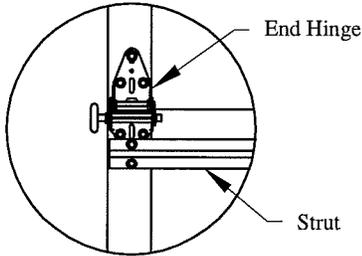


**Strut on bottom half of hinge**

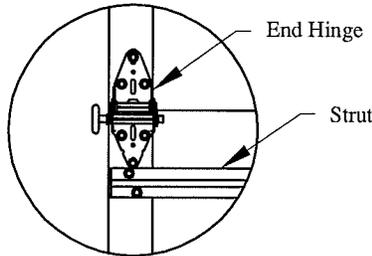


**Strut below hinge**

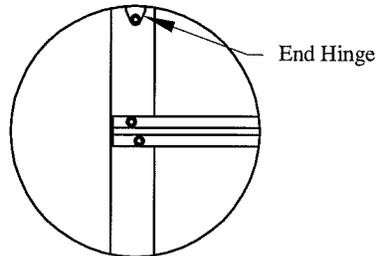


**Strut in center of section**

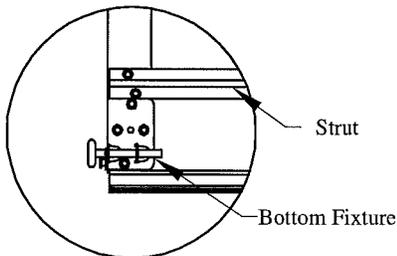

**Strut above bottom fixture**

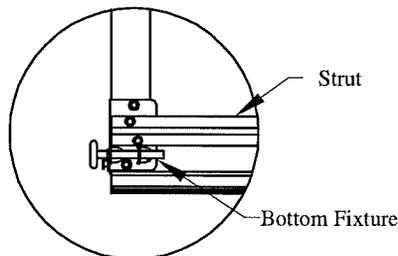


**Strut on top of bottom fixture**

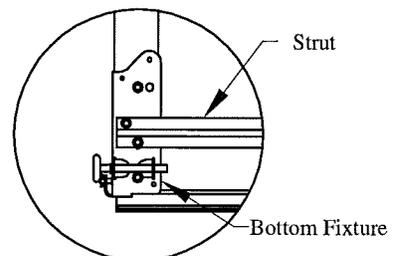


**Strut on top of bottom fixture**


**For use with double end hinges**  
**(hinges shown with four screws, see drawing for screw quantity requirements)**

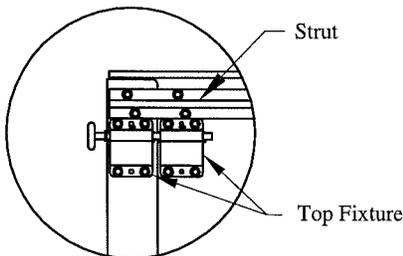


**Strut above top fixture**

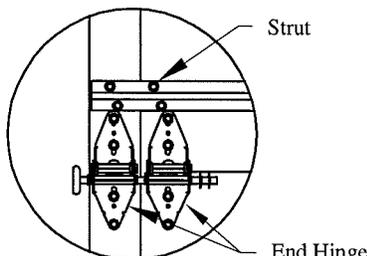


**Strut above the hinge**

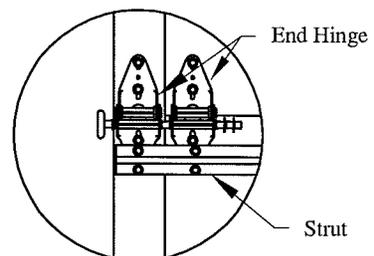


**Strut on bottom half of hinge**

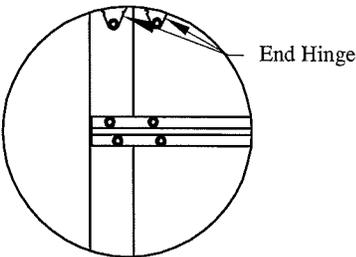

**Strut in center of section**

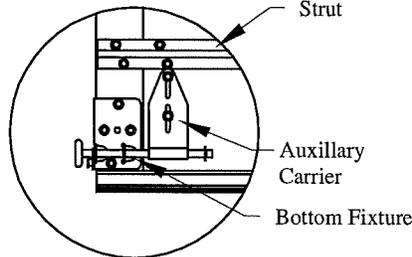

**Strut above auxillary carrier**

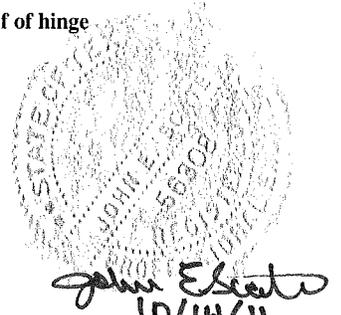

Professional Engineer's seal  
 provided only for verification of  
 windload construction details

John E. Scates, P.E.  
 3121 Fairgate Drive  
 Carrollton, Texas 75007  
 TXPE 56308, F-2203